

SPEED CANARDS SE-C-...



***THIS MANUAL IS WRITTEN WITH THE UTMOST CARE. HOWEVER, SHOULD
THERE BE ANY ERRORS, WE ARE NOT LIABLE FOR INCORRECT AND
UNSAFE INSTALLATION OR THE RESULTING DAMAGE!***

***BEFORE YOU START, PLEASE CHECK THE
COMPLETENESS OF YOUR KIT
AND MAKE SURE YOU HAVE THE RIGHT
TOOLS!***

SCOPE OF DELIVERY:

RIVETING TOOL IS REQUIRED

1X SET OF CANARDS

1X SET OF M4 SCREWS

1X SET OF M4 RIVET NUTS

***PLACE THE CANARDS ON YOUR FRONT BUMPER.
FIND THE BEST FITTING SPOT AND FIX THE CANARD.***



MARK THE HOLES OF THE CANARD.
MAKE SURE THE CANARDS IS STILL IN THE RIGHT POSITION.



**MAKE SURE TO MARK EVERY HOLE.
BE CAREFULL WITH THE POSITIONING OF THE CANARD.**




DRILL 8MM HOLES ON THE MARKED SPOTS



**ASSEMBLE THE RIVET NUTS WITH
THE RIVETING TOOL WITH CARE!
YOUR BUMPER IS MADE OF SOFT MATERIAL.**



ASSEMBLE THE CANARDS WITH THE M4 SCREWS.

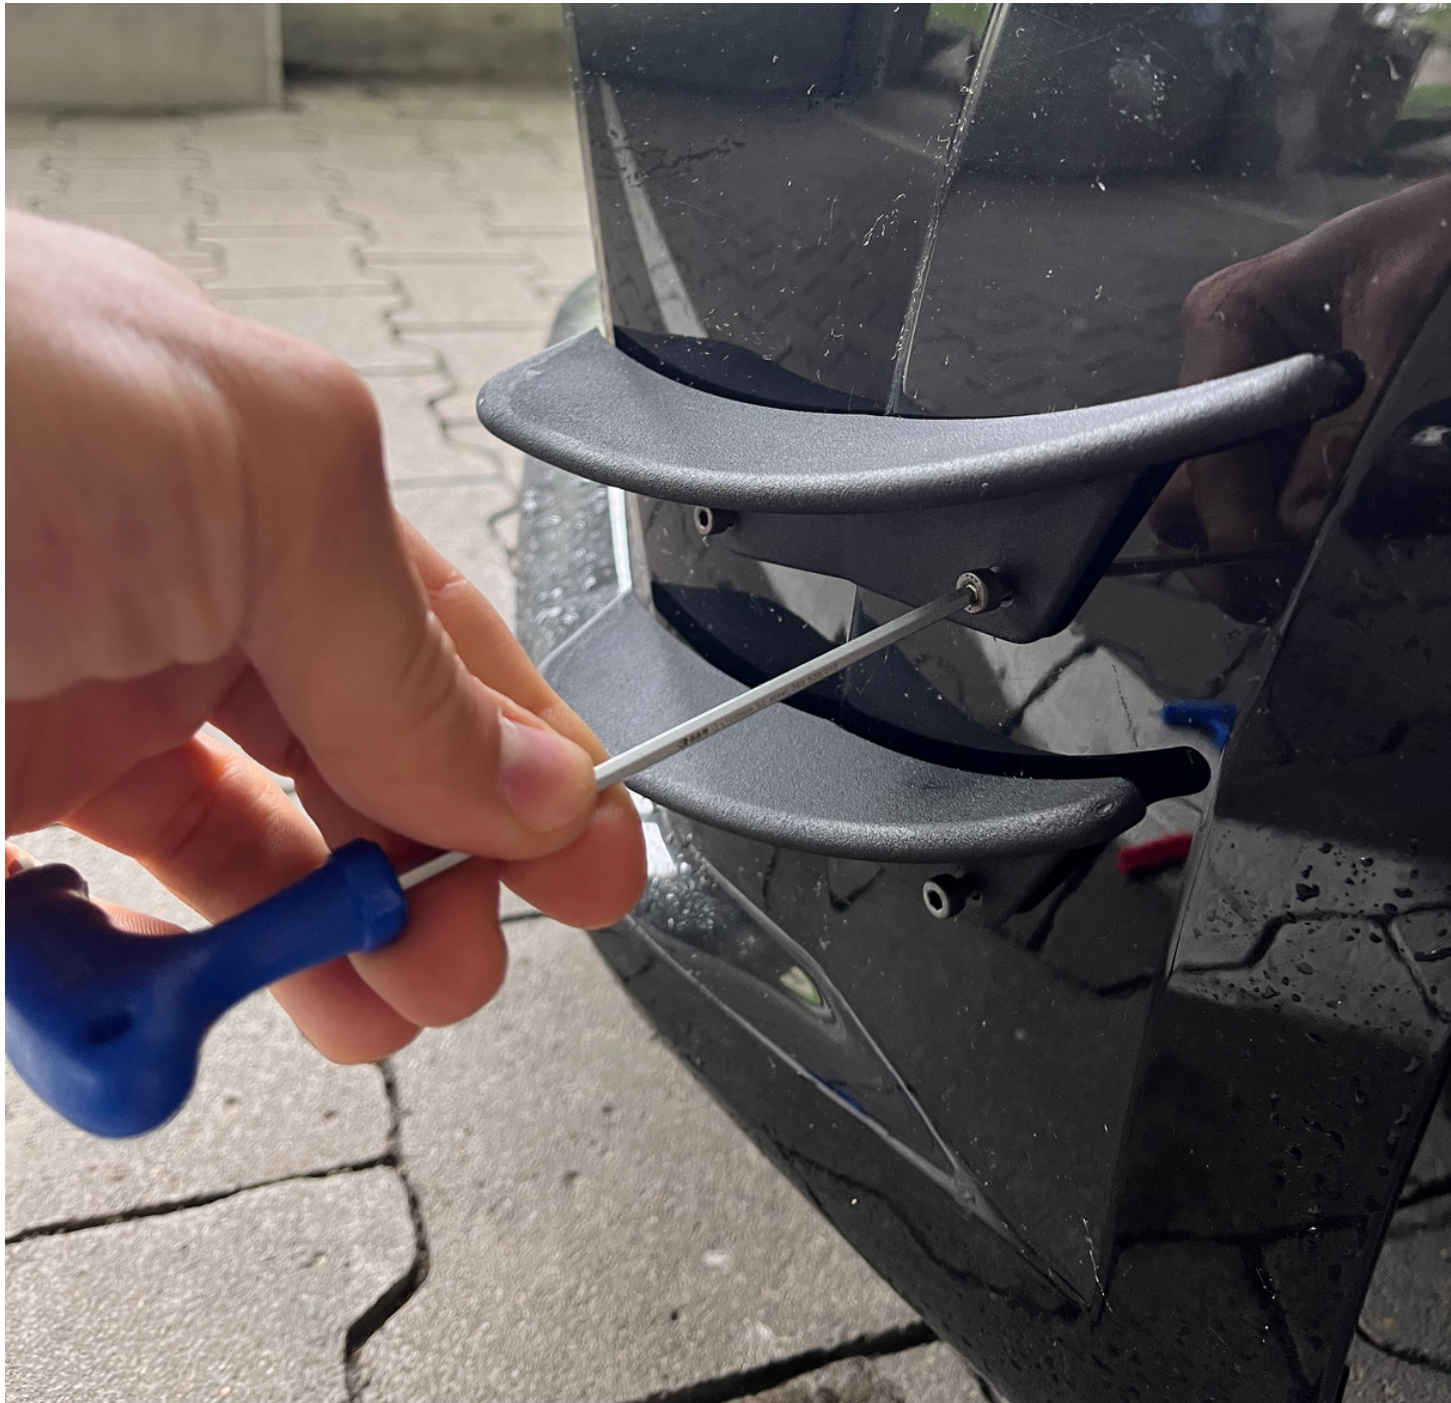

ASSEMBLE THE CANARDS WITH THE M4 SCREWS.



DONE!
WE HOPE YOU ENJOY YOUR
SPEED ENGINEERING
PRODUCT.

